

SNAPBAG® for ARRI® SKYPANEL® S120, S60 and S30



Please also refer to the luminaire instructions regarding use of accessories.

L2.0010383 SBA120

L2.0008145 SBA60

L2.0008141 SBA30

page 1/2



- 1) Open the SNAPBAG®.
Cord stoppers are at top & bottom.




- 2) Pull the elastics on all 4 corners
over the housing.

SAFETY INSTRUCTIONS



dopchoice.com/instructions/

- 3) Secure the webbing diagonally
over the blue corners.

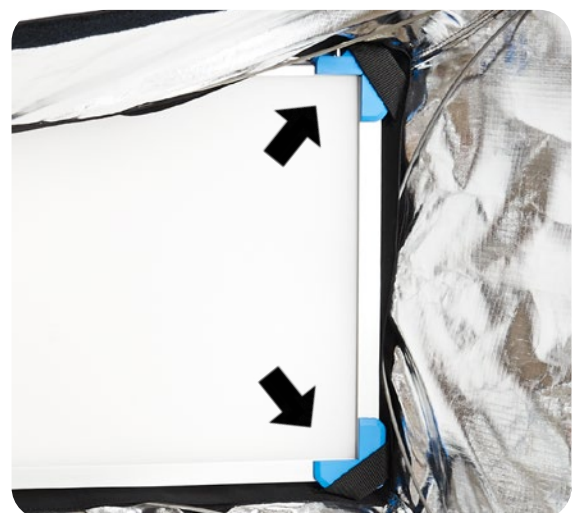

Read also our additional safety & handling instructions:
www.dopchoice.com/instructions

SNAPBAG® for ARRI® SKYPANEL® S120, S60 and S30



Please also refer to the luminaire instructions regarding use of accessories.

page 2/2

4) Pull the white cord over the corners.



5) Secure the SNAPBAG®.
The cord must be under tension.

Always secure the accessory with a suitable safety cable from falling when the primary mounting method fails.



SAFETY INSTRUCTIONS



dopchoice.com/instructions/

6) Insert diffusion.



**Read also our additional safety & handling instructions:
www.dopchoice.com/instructions**